 


ROLLER SHADE

INSTALLATION GUIDE

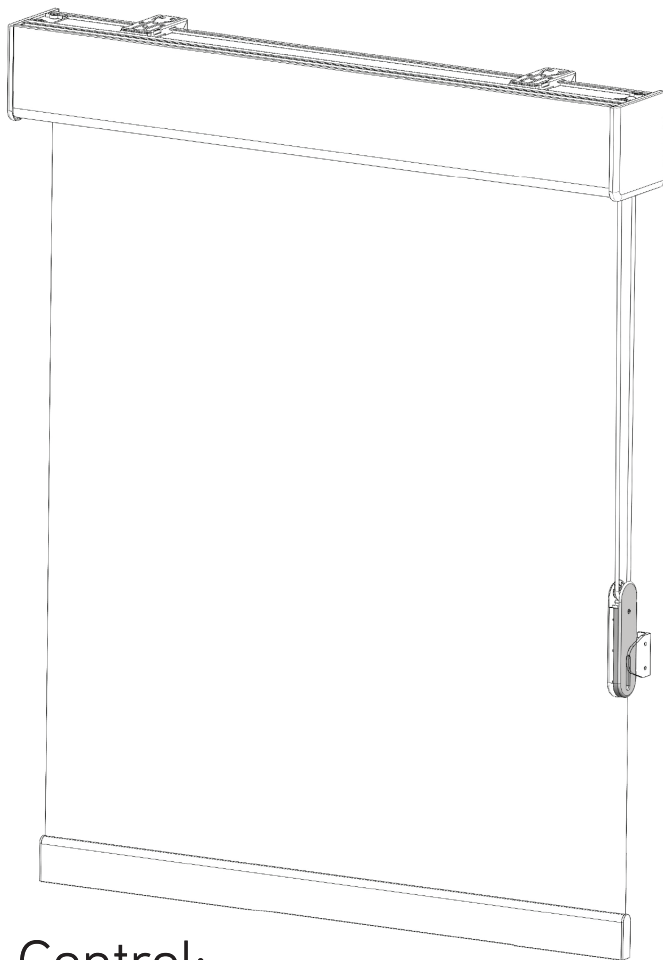

Lift Control:

**Continuous
Cord Loop**



CONTENTS

INCLUDED IN YOUR PACKAGE	1
SUGGESTED TOOLS (NOT INCLUDED)	2
MOUNTING OPTIONS	3
MOUNTING BRACKETS	4
INSTALLING THE SHADE	5
SAFETY TENSION DEVICE INSTALLATION	6-8
SAFETY TENSION DEVICE OPERATION	9-10
CARE AND CLEANING	11
WARNING EMERGENCY / FIRST AID	12

Thank you for Choosing our Roller Shade for your Residential or Commercial Property.

We are confident that you will find our Roller Shade to be of superior quality and value, compared to other shades available.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your shade.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING

 
CONTACTING US:

Contact your Dealer regarding any question or concerns about your product.

PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING

INCLUDED IN YOUR PACKAGE

Roller Shade - Continuous Cord Loop

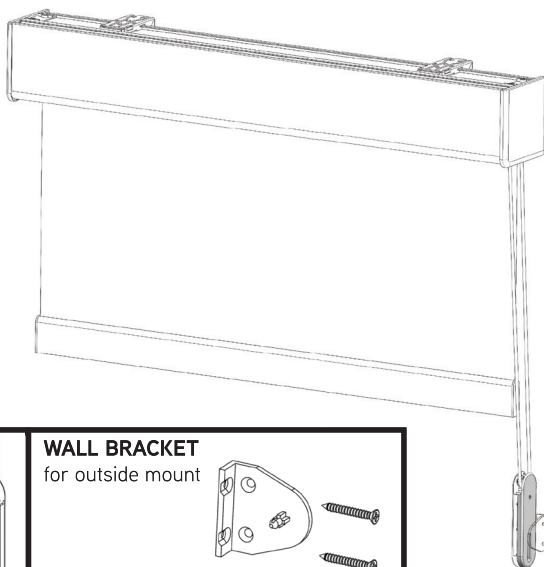


CORD TENSIONER

Cord Tension (Optional)



 
WALL BRACKET for outside mount



BRACKETS

Quantity: 2

 The wider the blinds the more brackets provided - see chart below

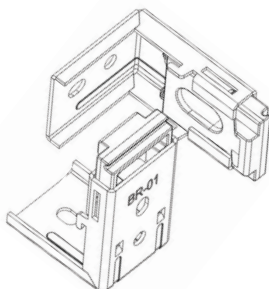

SCREWS

Quantity: 4 per packet




INSTALLATION BRACKET REQUIREMENT CHART

Blinds Width	Brackets Required
39" or smaller	2
40" to 59"	3
60" to 78"	4
79" to 98"	5

OPTIONAL PARTS: (supplied upon request)

 Spacer Blocks (Not Provided)

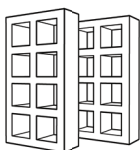

Use for blinds that need more space between the wall.


Wall anchors (Not Provided).



Wall Anchor (Not Provided)


If mounting into drywall, you will need wall anchors to ensure a secure installation.

SUGGESTED TOOLS (NOT INCLUDED)

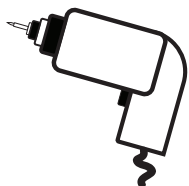

DRILL

 
*1/16" drill bit,
and 1/4"
hex driver*

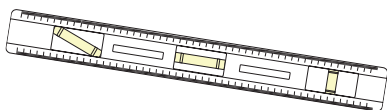

LEVEL




 PENCIL




SCREWDRIVER

*Flat blade, Phillips, or
1/4" hex driver*

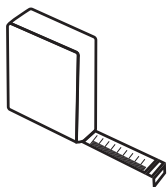

TAPE MEASURE

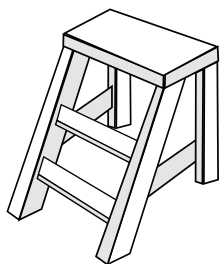

LADDER

 
 
MOUNTING OPTIONS

Your new shade is custom made to your specifications from the finest fabrics available. The installation should be easy and your shade will look elegant.

MOUNTING OPTIONS:



Inside mount (IB):

The shade is mounted inside to the top of the window frame.

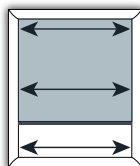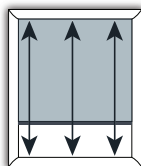

Outside mount (OB):

The shade is mounted either on or outside the window frame.

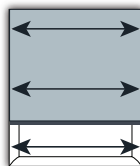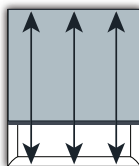

Mounting NOTES:

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.

 
 
- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

TROUBLE SHOOTING TIPS

Dry-Fit Bracket into Headrail Cassette: Prior to installing your shade, dry-fit the Bracket into the Headrail Cassette to verify how the bracket will snap into place.

Installing Brackets:



Inside mount: Use the stickers on the headrail to find the bracket center for each bracket. The bracket is able to move within the 2" area shown on the sticker.

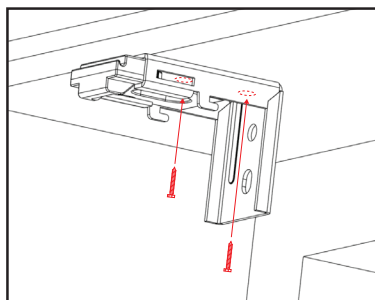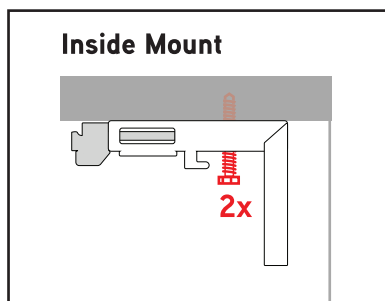

- Hold the headrail up inside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

Outside Mount: Outside edge of the brackets should be positioned at a minimum of 2" from the outside of the headrail cassette, note the sticker on the headrail cassette. Use wall anchors for a secure hold. Mark the position of the bracket as illustrated.

  
- Hold the headrail up above outside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

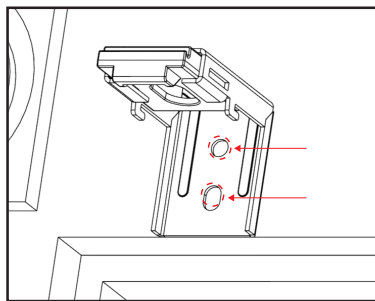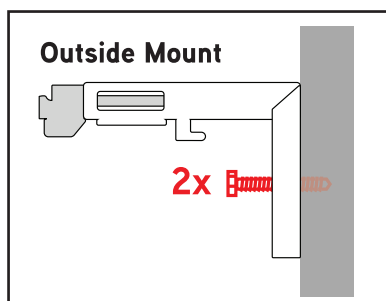


Spacer blocks (optional) will be attached to the end of each bracket. Ensure screws are long enough to secure brackets with spacer blocks. Do not use more than three spacer blocks per bracket. If installing extension brackets, do not use spacer blocks.

2 INSTALLING THE SHADE

 
1. Lift the head rail into position.

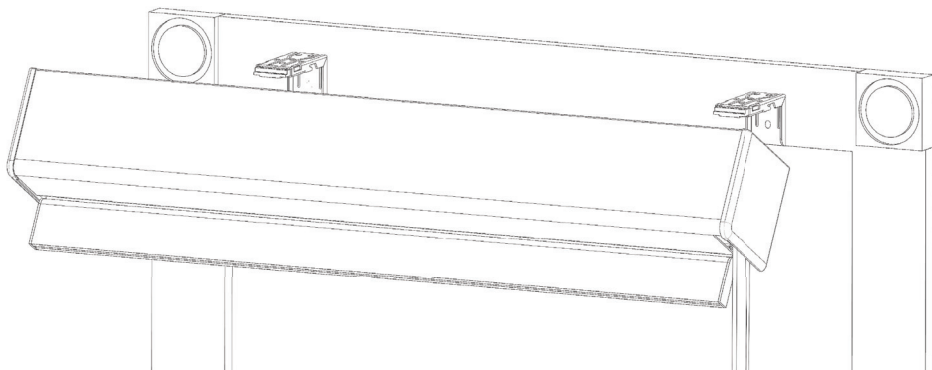

 
2. Slide the headrail into the brackets and rotate it down until it snaps into place.

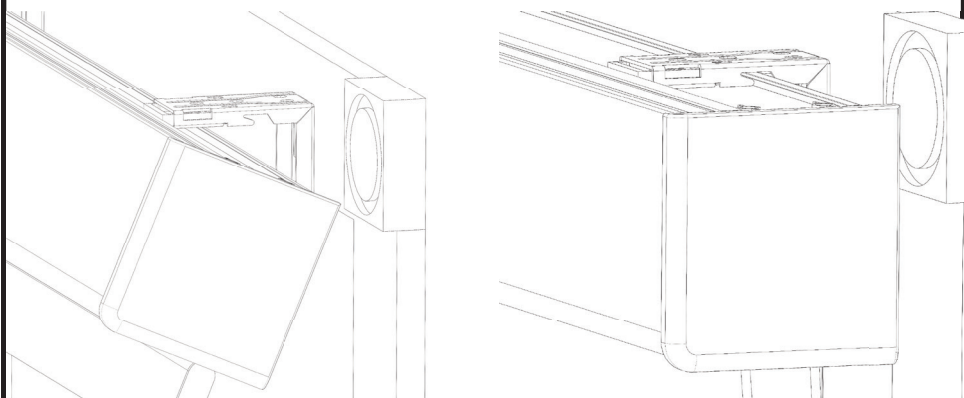

 
The top of the shade should look like the referenced image below.

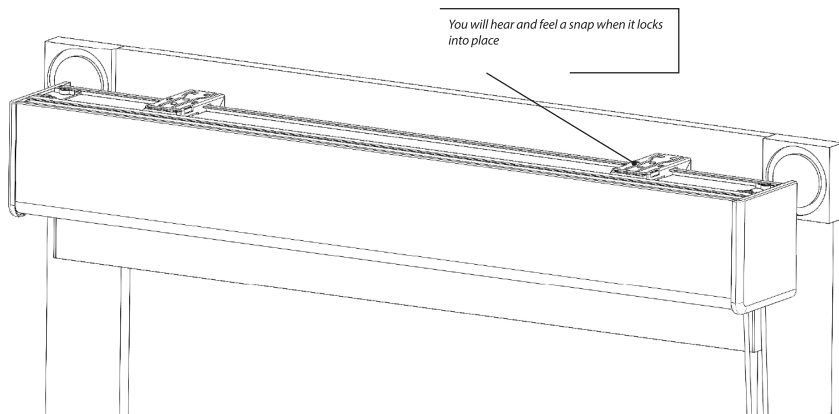


SAFETY TENSION INSTALLATION

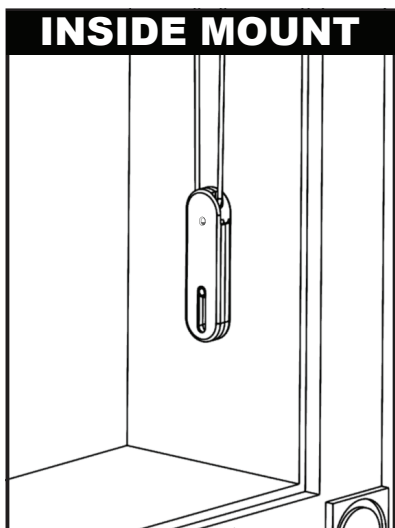 

PLACE DEVICE **INSIDE** WINDOW FRAME.

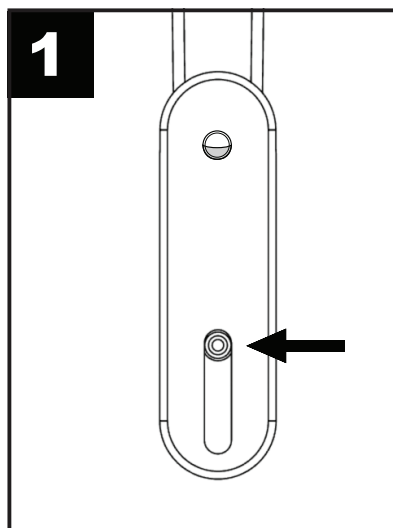 


 THIS IS THE HOLE FOR
MOUNTING THE SCREW.

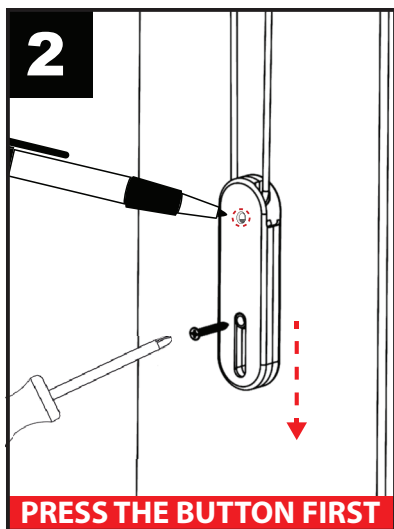


PRESS THE BUTTON FIRST

 PRESS THE BUTTON WITH A PEN OR PENCIL.
THEN INSERT THE SCREW AND PULL DOWN.

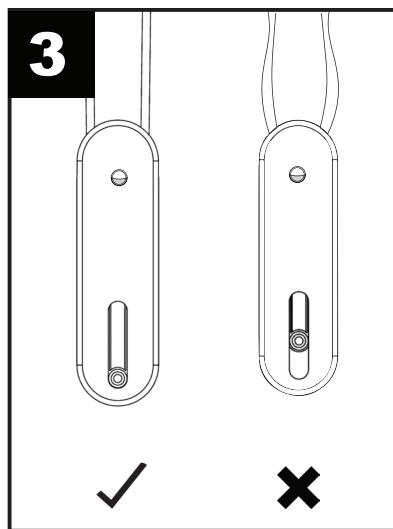


MAKE SURE THERE IS NO SLACK
AND TIGHTEN THE SCREW SECURELY.

 
OUTSIDE MOUNT

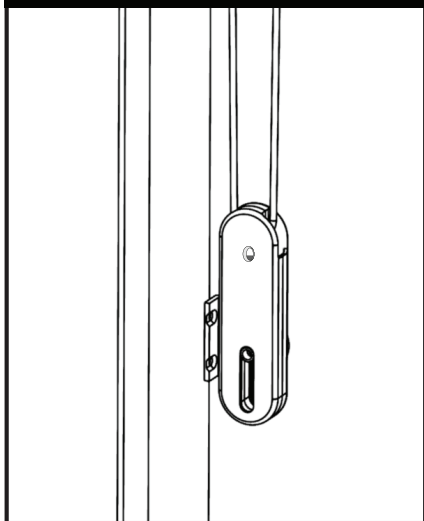

 
PLACE DEVICE AND WALL BRACKET
OUTSIDE WINDOW FRAME.

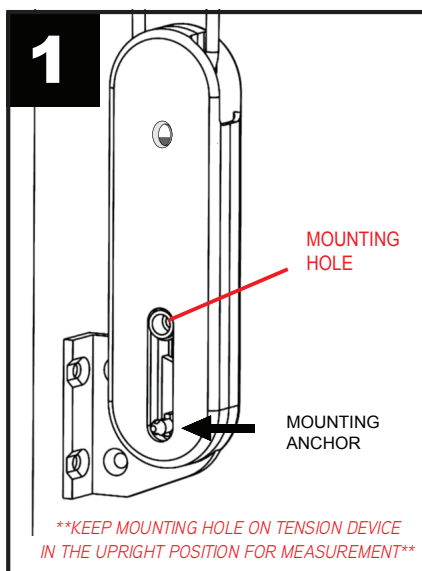

 
ENSURE THE TENSION IS TIGHT AND
THE **MOUNTING ANCHOR** IS AT
THE BOTTOM OF THE DEVICE.

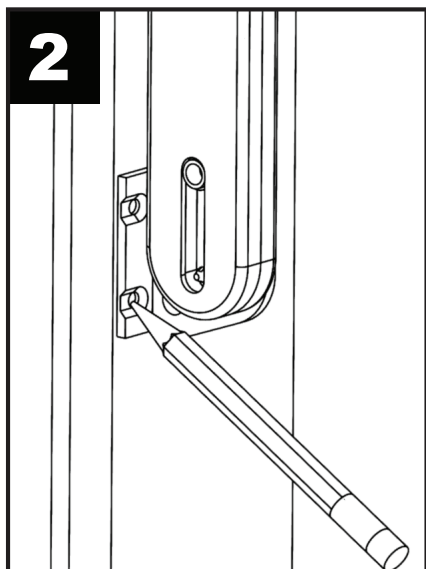


 
MARK THE PILOT HOLES
WITH A PEN OR PENCIL.

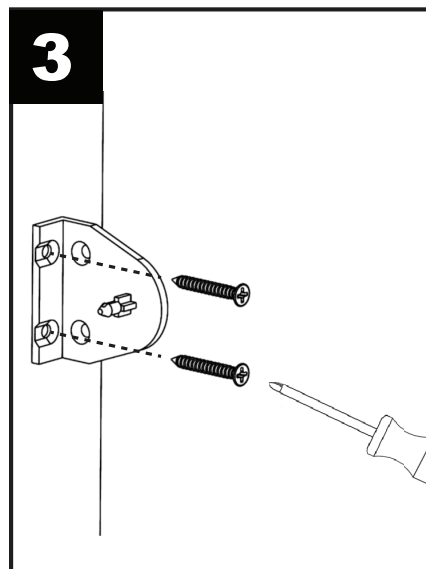

 SCREW THE BRACKET INTO THE
WALL USING YOUR MARKS.

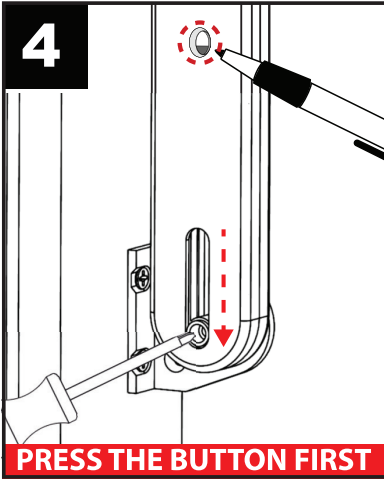

  PULLDOWN THE **MOUNTING HOLE**
TO MATCH THE **MOUNTING ANCHOR**.

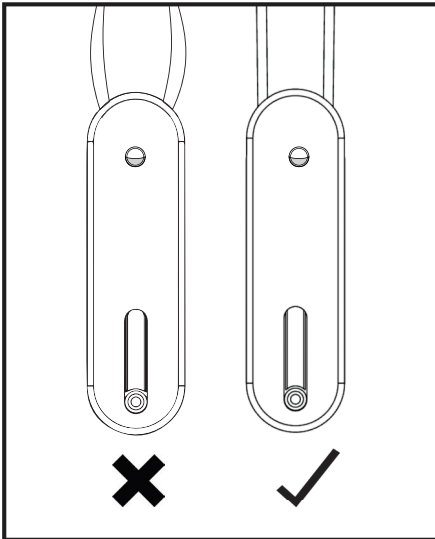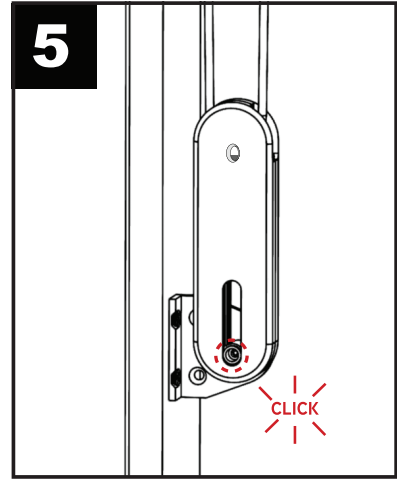

YOUR TENSION DEVICE CORD
SHOULD BE TIGHT AND NOT LOOSE.

 
****DISCLAIMER****
ONCE SECURED ON THE WALL MOUNT,
TENSION DEVICE WILL BE DIFFICULT TO REMOVE.
IF YOU TRY TO REMOVE,
THIS MIGHT CAUSE THE TENSION DEVICE OR WALL
MOUNT TO SNAP OR BREAK.

OPERATING THE SAFETY TENSION DEVICE

Keep cord straight do not pull outward this will engage the pinchers locking the cord in place.

Pull down on the **right (front) cord** to have
your shade go **up**.

(Shade Up)

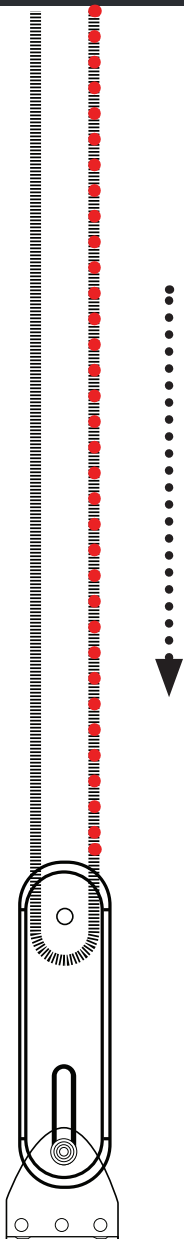


OPERATING THE SAFETY TENSION DEVICE

Keep cord straight do not pull outward this will engage the pinchers locking the cord in place.

Pull down on the **left (back)** cord to have your shade go **down**.

 (Shade Down)

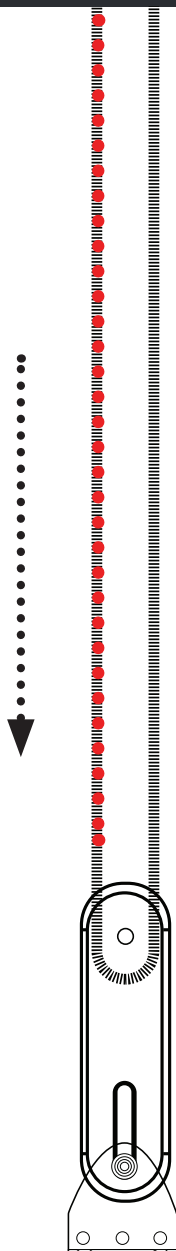

CARE AND CLEANING

The soft, delicate feel of woven fabric with the durability of wood materials. It is made from a sturdy, woven fabric and wood slats which can be feather dusted or vacuumed on a low setting. Spots or stains can be lightly rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. The woven fabric may also be ultrasonically cleaned.

Remove The Shade

- Fully raise the shade.
- While holding the headrail, remove each wing nut from all screws on the brackets.
- If required, pull the micropleat opacity liner free from the mounting clips by releasing the latch.

Cleaning Procedures

For most fabrics, the following options are available if your shade needs cleaning.

Dust Removal

In most cases, just use a feather duster to gently dust off regularly

Vacuuming

Use a low-suction hand-held vacuum cleaner to remove dust more thoroughly

Hair Dryer

Use a hair dryer to turn on the cold air to blow away the dirt and debris between the blades.

Spot Cleaning

- Prepare a solution of warm water and a mild detergent.
- Dampen a clean cloth in the solution and wring out.
- Dab the spot with the dampened cloth until it is gone. Do not rub the fabric.
- Allow the shade to dry in the completely lowered position.

NOTE:

The Warning labels on the bottom-rails of corded window coverings contain important safety information. These warning labels are designed to be permanent, in accordance with the industry's safety standards, and must not be removed.



Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing

IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.



EMERGENCY / FIRST AID

- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...



NOTES

ROLLER SHADE

Lift Control:

CONTINUOUS CORD LOOP

L I M I T E D 3 Y E A R W A R R A N T Y

The Manufacturers Collection will be free from defects in materials and workmanship for as long as the original purchaser owns the product, provided that the product was installed properly. The limited 3 year warranty is extended to the original purchaser only, in the original window for which it was intended.

The warranty does not include any condition or damage resulting from accidents, alterations, misuse, failure to install properly, or others instances outside of Manufacturers control. This warranty also does not apply to conditions resulting from normal wear and tear.

To obtain service, contact the dealer from whom you purchased the product. Manufacturer will repair or replace defective parts or components at no charge.

This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall Manufacturers be liable for incidental or consequential damages, or for any other damage, loss or expense, cost or fees associated with such damage. In some states, exclusion for incidental or consequential damages are not allowable.

This warranty does not cover any transport, removal, or re-installation charges which may occur as a result of defects in materials or workmanship.

This warranty gives you specific legal rights, and may also have other rights, which vary from state to state.